

 


we  clean

# User Guide

Vax Careline: (UK) 0844 412 8455  
(ROI) 1-800 928 308

## Handheld

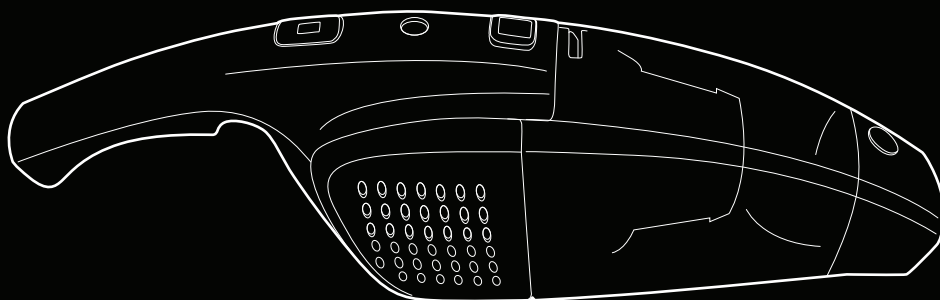

## Get Cleaning...

What's your Vax model number?

e.g. H90-GA-B

What's your serial number? (Located on the base of the machine)

	-							-			-			-			-						
--	---	--	--	--	--	--	--	---	--	--	---	--	--	---	--	--	---	--	--	--	--	--	--

 
 
 
Note these down in case you need them in future. Please keep instructions for further use.

[vax.co.uk](http://vax.co.uk)

H89-12V Series

# Machine Overview

- 1 Nozzle release button
- 2 Dirt container
- 3 Filter
  - a) filter shroud
  - b) filter
- 4 Dirt container release button
- 5 Charging indicator (blue LED)
- 6 On/off switch
- 7 Charging connection point
- 8 Charger
- 9 Dusting brush
- 10 Crevice tool

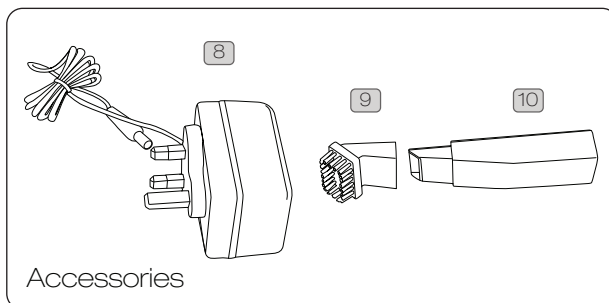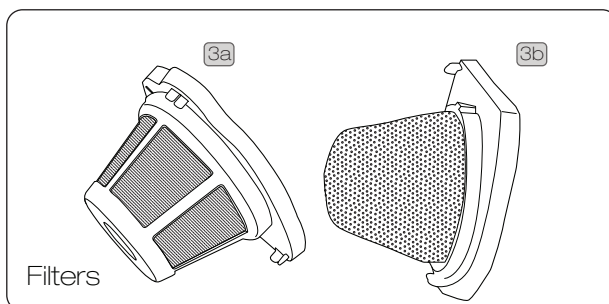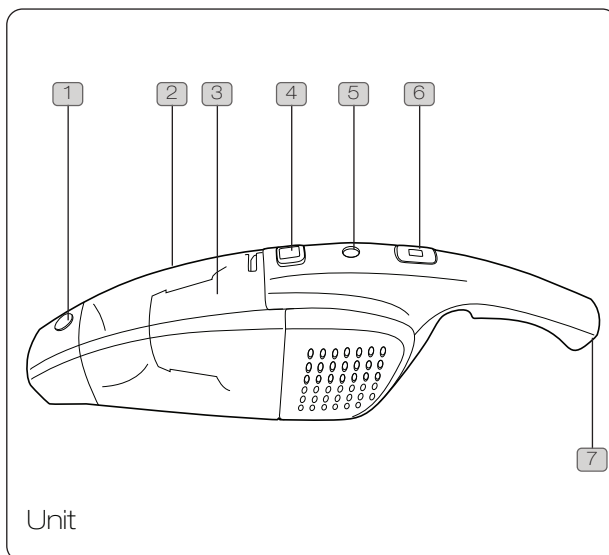

# General Safety Information

## FOR HOUSEHOLD USE ONLY.

When using the handheld, basic safety precautions should always be observed, including the following:



**WARNING:** Do not use outdoors or on wet surfaces.

1. Do not charge the unit outdoors.
2. Turn off the handheld before connecting or disconnecting from the mains supply.
3. Children should be supervised to ensure that they do not play with the appliance.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.
5. Use only as described in this manual. Only use the manufacturer's recommended attachments.
6. Do not use the handheld vacuum if it has been dropped, damaged, left outdoors, or dropped into water. Do not use the charger with a damaged cord or plug. If the charger is damaged, it must be replaced by the manufacturer or a recommended Service Agent to avoid hazard and invalidating the guarantee.
7. Do not abuse the cord. Keep the cord away from heated surface. Do not pull the cord around sharp edges or corners. Do not close the cord in a door.
8. Do not handle the plug or appliance with wet hands.
9. Do not throw batteries into fire or expose them to high temperatures, as they may burst.
10. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
11. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
12. Do not pick up hot coals, cigarette butts, matches or anything hot, smoking or burning objects.
13. Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc) or use in the presence of explosive liquids or vapour.

14. Do not vacuum up harmful or toxic material (chlorine bleach, ammonia, drain cleaner, etc).
15. Do not use without the filter in place.
16. Do not vacuum up hard or sharp objects such as glass, nails, screws, coins, etc.
17. Turn off all controls before unplugging.
18. Take extra care when cleaning on stairs
19. Store the appliance indoors in a cool, dry area.
20. Only use the charger supplied by the manufacturer to recharge.



**IMPORTANT:** For dry debris use only.



**WARNING:** Always switch off and unplug the handheld from the electrical outlet before assembling, opening or emptying the dirt container, or before connecting/disconnecting the attachments or performing any maintenance.



 
**IMPORTANT:** Remove the battery from the appliance before recycling. For further information please contact your local waste management centre.

**This handheld is intended for household use only and NOT for commercial or industrial use.**

**PLEASE KEEP INSTRUCTIONS FOR FURTHER USE.**

# Operation


## Charging and operation

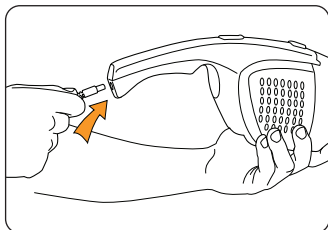

Plug charger into the mains and insert lead into back of unit.





 **NOTE:** The initial charging time is 15 hours. While charging, the indicator will remain a steady blue. Once fully charged, the light will flash.

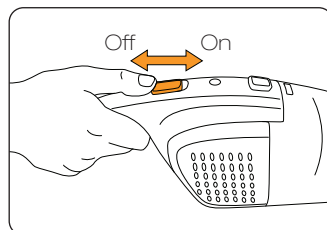


On/off switch.

## Tools

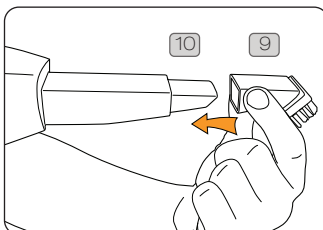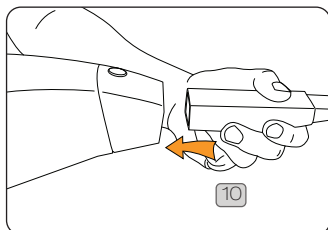  


The crevice tool can be attached directly onto the nozzle. To use the dusting brush, attach to the crevice tool.


## Emptying the dirt container

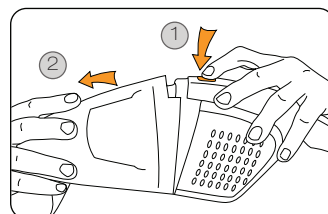 

 To open, press release button to remove the dirt container.

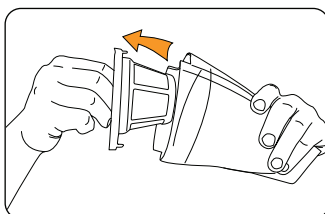


Remove filter.

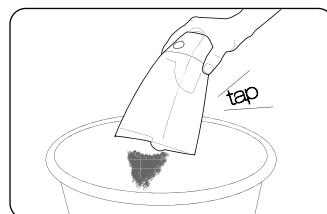 

Empty over a bin.

# Maintenance (Keep your Vax as good as new)



 
## Dirt container and filter maintenance

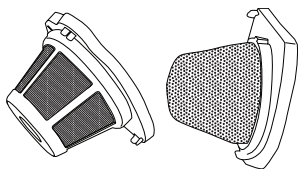

**! IMPORTANT:** The condition of the filter affects the performance of your machine. Please check and clean the filter periodically (depending on the level of use).

**! IMPORTANT:** Do not use the handheld without the filter in place.


## Cleaning the filter

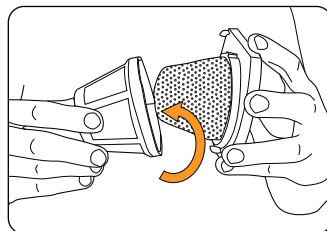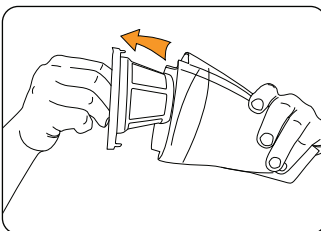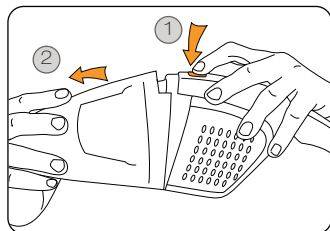   


Turn anti-clockwise to separate the filters.



 Tap filters against bin.

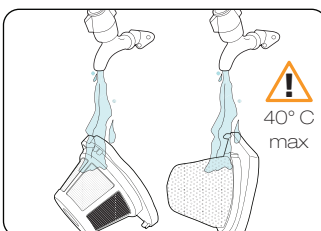


**! 40° C max**

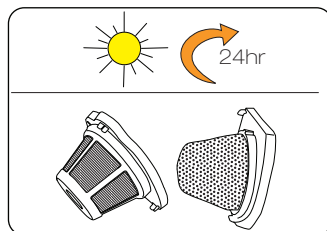 


# Maintenance (Keep your Vax as good as new)
 
## Cleaning the nozzle

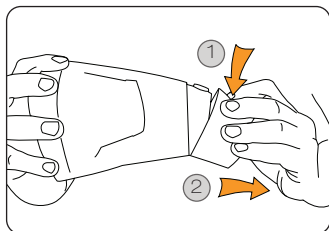


 To open, press release button and pull nozzle away from dirt bin.

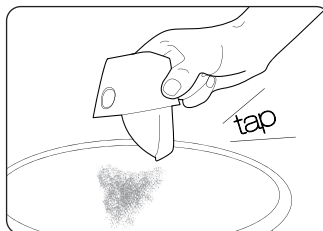


Shake excess dirt from dirt container. Tap nozzle against bin.

## To re-attach nozzle and dirt container

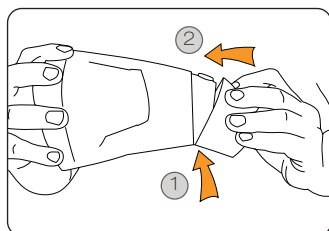 

 Align bottom of nozzle with dirt container and clip on.

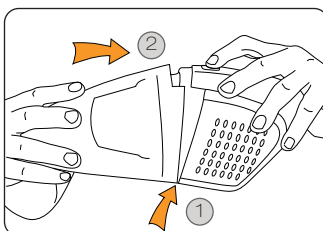

Align bottom of dirt container with main body and clip on.



**NOTE:** An audible 'click' can be heard when the nozzle and dirt container are re-attached correctly.



**NOTE:** Please ensure filter is located back in position when re-attaching nozzle and dirt container.

# Maintenance (Keep your Vax as good as new)

## Battery maintenance

### Disposal



**IMPORTANT:** The handheld vacuum contains a battery that must not be disposed of in your domestic waste. Check with your Local Authority for recycling advice.



### Removing the battery

- Never short-circuit the battery, i.e. never touch both poles simultaneously, especially with metal objects.
- Never dismantle the battery.
- Never expose the battery to high temperatures.
- Improper handling can lead to liquid leaking from the battery. This can cause skin irritations. Avoid any contact with the fluid.
- If it becomes necessary to replace the battery, contact the Vax Careline.
- Do not replace the battery with a battery of a different type.

# FAQs



**WARNING:** to reduce the risk of personal injury, unplug the handheld before performing maintenance/troubleshooting checks.

## Why will the handheld not run?

- The battery may not be charged. To charge the battery, the power switch must be in the 'off' position. The static blue light shows the unit is charging. The initial charge should be for 15 hours.
- For further assistance, please call us on: **0844 412 8455**

## Why won't the handheld pick up?

- The nozzle or crevice tool may be blocked; remove the obstruction.
- The filter may be clogged or dirty; clean the filter. Refer to the Maintenance section.
- The battery charge is getting weak; let the battery run until it stops and recharge.
- The dirt container is full; empty the container.
- For further assistance, please call us on: **0844 412 8455**

## Why won't the battery recharge?

- The charger may not be inserted correctly.
- Check the mains power is switched on.
- The electrical outlet may not be working; check the fuse or breaker and consult an electrician.
- For further assistance, please call us on: **0844 412 8455**



we  to help

Don't take your machine  
back to the shop, simply  
contact us

[vax.co.uk](http://vax.co.uk)

**0844 412 8455**

This does not affect your statutory rights.



# Other Information

## UK Service & Help

Vax Customer Careline:  
(UK) 0844 412 8455  
(ROI) 1-800 928 308

Any queries or concerns about using the Vax, call the Vax Careline. Please make a note of the serial number and model number of the carpet cleaner before calling. For the nearest Service Agent, please call the Vax Customer Careline or visit [vax.co.uk](http://vax.co.uk)

## Technical Specification

Battery voltage:	12V
Capacity:	0.7L
Runtime:	15 mins
Weight:	1.3kg
Charger input wattage:	230 - 240V - 50Hz
Charging time:	15 hours
Filter type:	Washable

Subject to technical change without notice.



## EEC Statement of Compliance

Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility, declare that the H89-12V series is manufactured in compliance with the following Directives:

**Safety:** 2006/95/EC Low Voltage Directive

**EMC:** 2004/108/EC Electromagnetic Compatibility Directive



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

# Notes

This page has been left intentionally blank.

# Notes

This page has been left intentionally blank.



Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 0QH, UK  
email: [info@vax.co.uk](mailto:info@vax.co.uk) - website: [vax.co.uk](http://vax.co.uk)

Version 1.0